

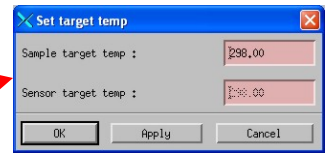


EDTE in Bruker's XWINNMR 3.5

edte

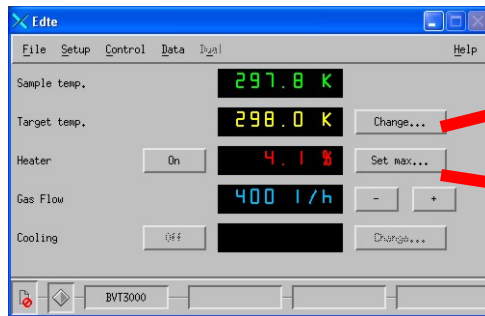


Data.....
.....

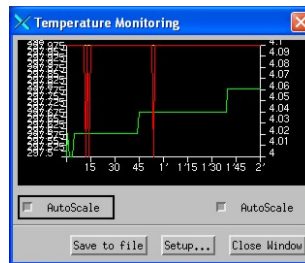


After Probe change:

Setup.....
.....Sensors



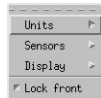


Round-Base probes:
Thermocouple T
Square-Base probes:
BTO2000

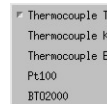

start with Max power at 4
so it doesn't overshoot when turning on edte after probe change.

File.....
.....Load configuration

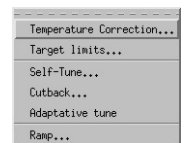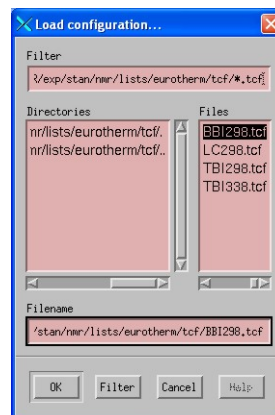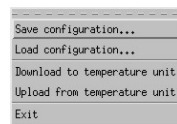

Control?.....
.....Self-Tune..

If major change from the norm.